

CPM-100 Generic Fire Equipment & Action Catalogue

1

Fire Equipment & Fire Action

2



FF1001



FF1002



FF1003



FF1004



FF1005



FF1006



FF1007



FF1008



FF1009



FF1010



FF1011



FF1012




FF1013




FF1014



FF1015

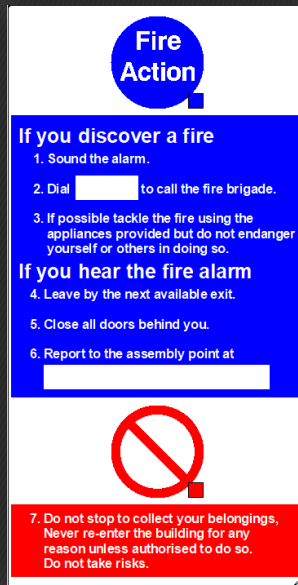

FF1016

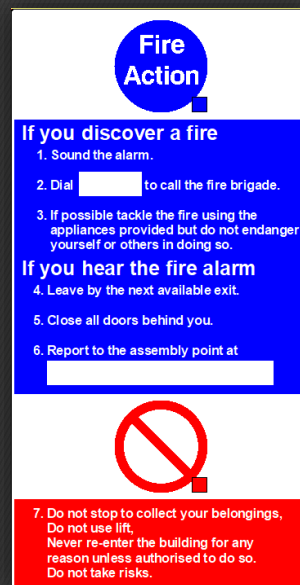


FF1017




FF1018




FF1019

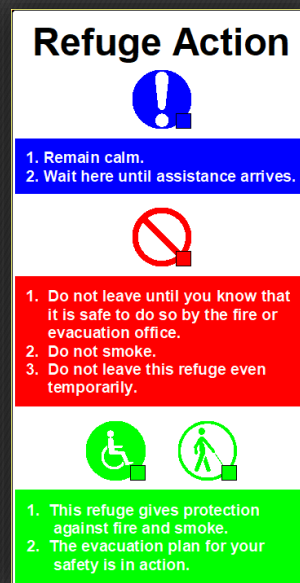

FF1020

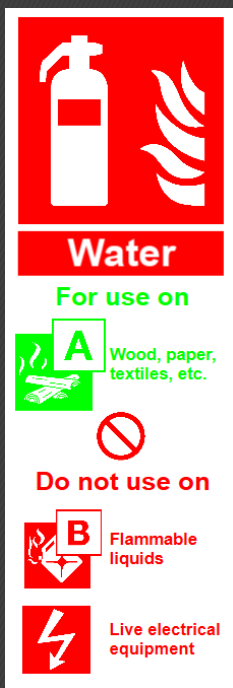

FF1021

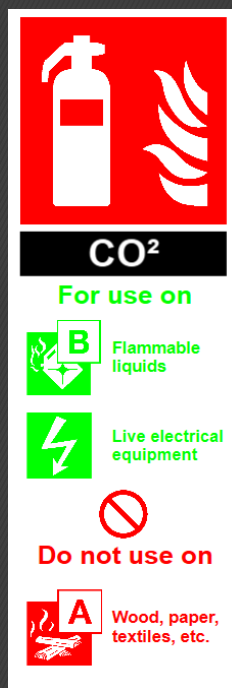

FF1022



FF1023



FF1024



FF1025



FF1026



FF1027



FF1028



FF1029



FF1030



FF1031



FF1032



FF1033



FF1034



FF1035



FF1036



FF1037



FF1038



FF1039



FF1040



FF1041



FF1042



FF1043



FF1044



FF1045



FF1046



FF1047



FF1048



FF1049



FF1050



FF1051



FF1052



FF1053




FF1054



FF1055



FF1056

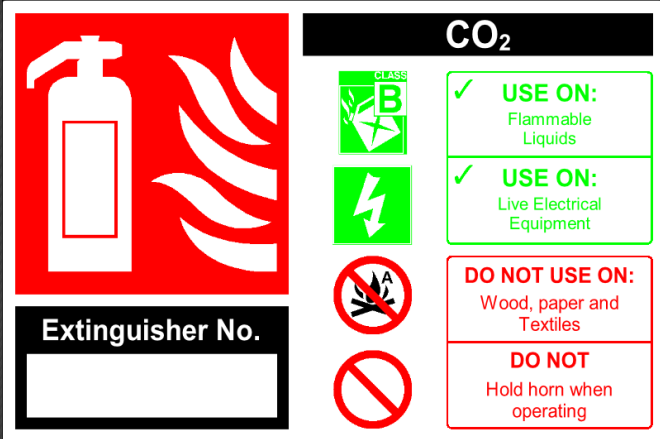

FF1057



FF1058



Fire Action

1. Call Fire Brigade Immediately.

2. Proceed to nearest available exit.

3. Do not return to your vehicle.

FF1059





**Fire emergency
telephone**



FF1060

**Fire fighting
equipment**



FF1061

Fire Hose



FF1062



Fire Ladder



FF1063

In case of fire



**DO NOT
use the lift**



**Use
the stairs**



FF1064



**Unconnected
Fire Hose**

FF1065